


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM HUSKY LINERS, INC

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. They are designed for vehicles equipped with factory carpeting. **If you have rubber style flooring instead of carpeting, we recommend the use of Husky Floor Mats. If you choose to use Husky Floor Liners, make sure that there is no possible interference with your vehicle's foot pedals.** Your liners are made to take the place of your factory floor mats. Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD TRUCK FRONT FLOOR LINERS

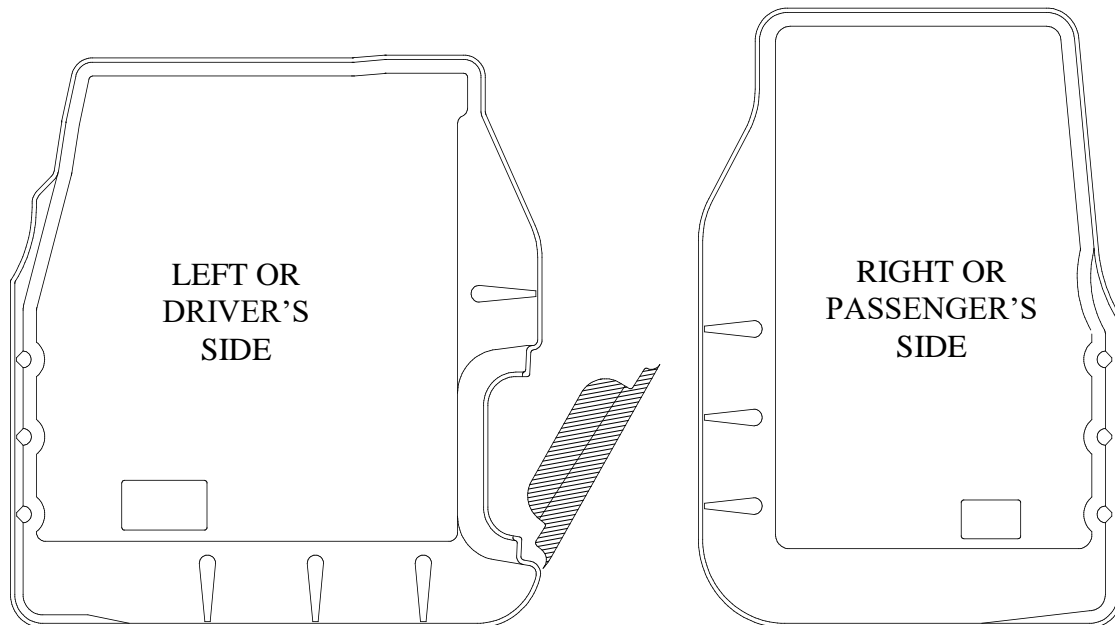

IF YOUR TRUCK IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR MAT AS SHOWN ABOVE. TRIM LEAVING A ONE-QUARTER INCH (1/4") LIP ALONG THE FLAT ANGLED SURFACE AND FOLLOWING AROUND THE RAISED SURFACE THAT MAKES THE SLOPING WALL OF THE LINER. A UTILITY KNIFE OR HEAVY SCISSORS WORKS WELL FOR TRIMMING. SEE THE BACK OF THIS INSTRUCTION SHEET FOR A MORE DETAILED VIEW.

TRIMMED LINER PHOTO

