


Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

INSTALLATION INSTRUCTIONS REAR STABILIZER BAR

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

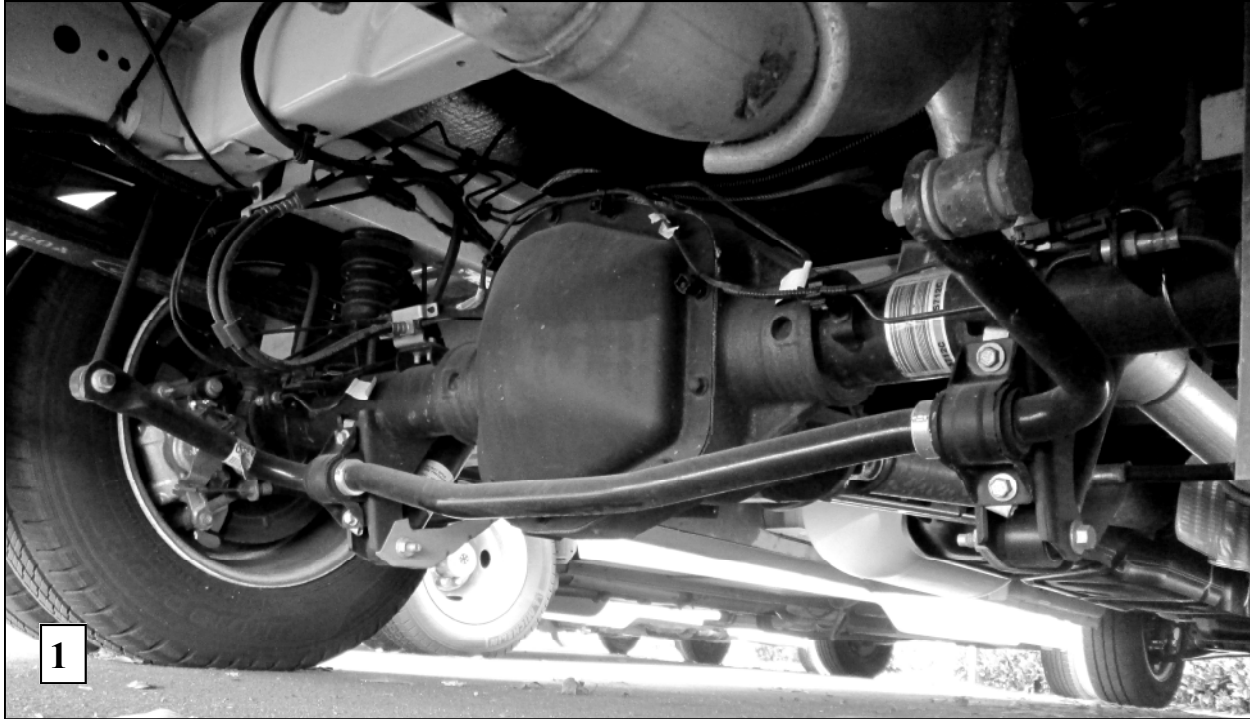

SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.

NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST THE BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE VEHICLE BY THE FRAME.


NOTE: THIS SWAY BAR IS DESIGNED TO REPLACE THE FACTORY INSTALLED SWAY BAR AND REUSES THE FACTORY SUPPLIED END LINKS.

Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

1. Remove the factory installed anti sway bar and the mounting hardware leaving the end link attached to the vehicle. Do not discard the factory hardware as they will be re-used.
2. Lubricate the inside and install the D-shaped poly bushings on the new sway bar in the same location that the bushings were on the factory sway bar.
3. Position the U-plates over the D-shaped poly bushings and position the new sway bar on the frame with the factory bolts. **Leave loose at this time to allow for adjustment later.**
4. Reattach the factory end links to the sway bar in the outer holes of the sway bar.
5. Center the sway bar and then tighten all the bolts back to factory specs on the axle U-plates and the end links.
6. Attach the collar clamps on the inside of the D-bushings to keep the bar centered like the collars on the factory sway bar
7. Bounce the vehicle checking for clearance on all under carriage components – emergency brake cables, exhaust, shocks, differential, etc. Test drive the vehicle and recheck all clearances and the installation alignment. Adjust as needed. Recheck your installation after one week of driving and periodically on a regular basis.
8. The sway bar arms have three mounting holes. Mounting the sway bar on the outer hole is the nominal position. For firmer settings, use the inner holes. We recommend starting with the outer mounting hole until you are accustomed to the vehicles new handling characteristics. Select the mounting point that best fits your driving style and vehicle weight.

ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM

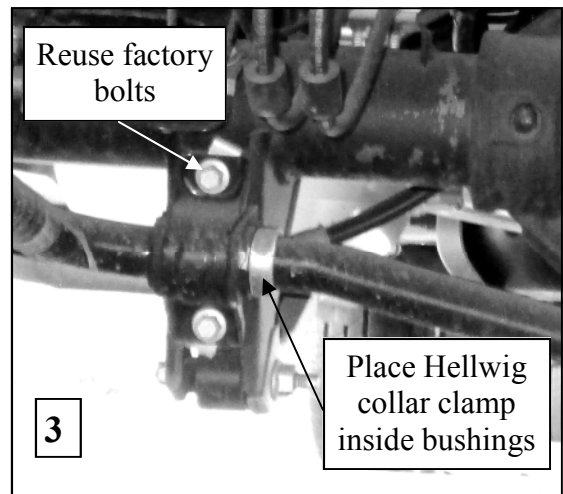

Maintenance and Inspection:

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting brackets and bushings. If you do not perform this inspection, have your professional mechanic inspect as described.